
 WORK INSTRUCTION	SERVICE FOR A60/A75/A84 BREAKAWAY CABLE ROUTING	Docu. #	Rev
		WI-0040	A
CH 1	Description CABLE ROUTING	Date: 12/6/12	
Page 1		Checked: D.S.	Author: F.W.

**BREAKAWAY
CABLE ROUTING**

- Routing Breakaway Cable as shown.
- Add a clip before mid ball.
- Place Master Cyl. Assembly in Inner Member.
 - Slide cable attachment plate over pushrod assembly.
 - Align pushrod with push bracket hole. Slide M/C and pushrod assembly into Inner Member while pushing down on release bracket tab.

CABLE ROUTING UNDER EYE OF SHOCK ABSORBER

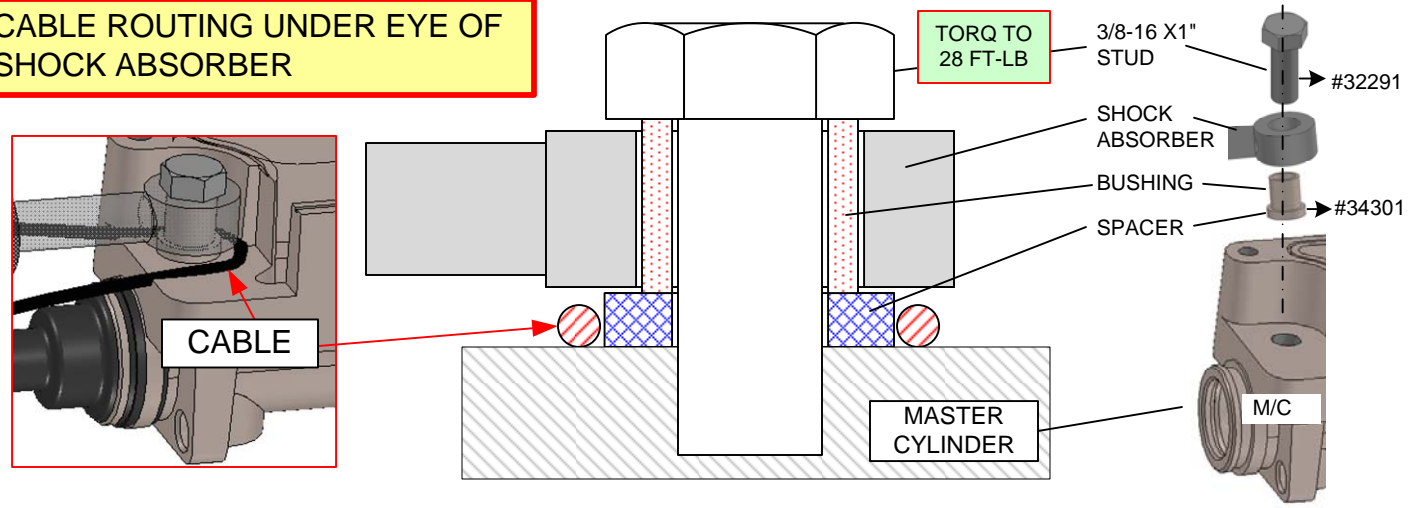

- BREAKAWAY CABLE ROUTING:**
- **MUST NO CROSSING** ON BOTTOM VIEW.
 - THE **CABLE ATTACHMENT PLATE** MUST ALWAYS ORIENT TO THE **OPPOSITE** SIDE OF **CABLE EXIT HOLE** ON THE FRONT OF THE INNER MEMBER.

**CABLE
ATTACHMENT
PLATE**

